[EN]

Interface USB-To-Serial Comm Port
for
Gas systems (DIEGO, BINGO etc.)

User's manual

1. System requirement
- Computer system requirement IBM PC/AT or compatible desktop with USB port.
- Operation system requirement: Windows 98 SE/ Windows 2000/ Windows XP/ Windows Vista.
- No external power is required, powered by USB bus directly.

2. Driver Installation
- Be sure your computer support USB port.
- Be sure that USB ports work correctly.
- Do not plug in USB interface before driver installation.
- Startup Windows operation system, then choose driver for your operating system.
- Install driver: PL-2303 Driver Installer.exe or Vista_Installer.exe file.
- After installation reset operation system.
- Plug USB interface into USB port of the computer. The system will setup the driver automatically.
- After that, you will find a new COM port on Device Manager (Start/Control Panel/System/Hardware/Device Manager/Ports (COM&LPT).
It is named: Prolific USB-To-Serial Comm Port (COM _).

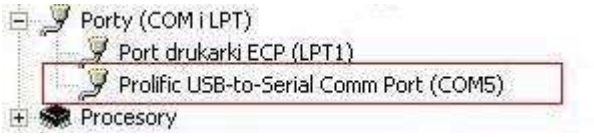

- Install the appropriate software for gas system.
- Choose correct comm. Port into software.